


## POCKET READER

Communication-Software PocketReader Palm V 1.0 for 3Com Palm

### System Requirements

PocketReader Palm V 1.0 was designed for the 3Com Palm III and V running under PalmOS 3.0 and higher. For proper operation your Palm needs to be equipped with this or a higher version of the operating system. The function of the program on older OS versions can not be guaranteed.

You can connect your Palm with the POCKET READER using a 'HotSync' cable which is connected to the POCKET READER cable via 'null-modem' adapter. Such an adapter connects the sub-D ends of the two cables and has the following structure:

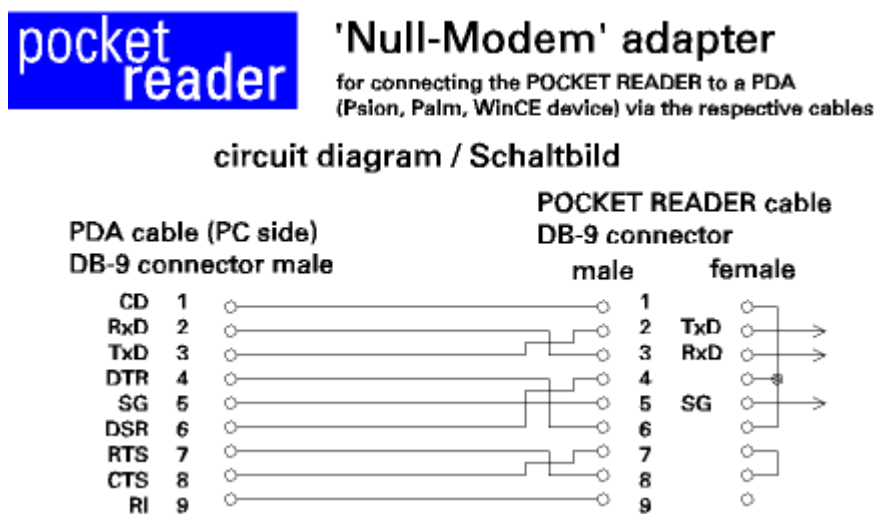

### Installation

For installing the PocketReader Palm V 1.0 software on your Palm, you need a desktop PC with the respective *Palm Desktop Organizer Software* installed. With this software you can transfer data between your desktop PC and the Palm (in case of the installation of PocketReader Palm V 1.0 these data are the executable program). The *Palm Desktop Organizer Software* comes with your Palm device. For detailed instructions on the installation of software on your Palm please refer to the respective manual or help.

## Program usage

The program PocketReader Palm V 1.0 is currently available with an English user interface only.

### **Funcions of the PocketReader Palm Software V 1.0**

The PocketReader Palm Software V 1.0 somewhat resembles the Memo Pad, which is installed on your Palm by default. Just like with the Memo Pad, there is a List-Screen ("PocketReader") to be seen when the program starts, and an Edit-Screen ("Memo"). As a difference to the Memo Pad there is no function to transfer categories or memos, and there is no "new" button - instead, you will find the PocketReader functions. Most of the other Memo Pad functions are available.

In the lower right corner of each window you will find an icon depicting the data transfer between Palm and POCKET READER (Z with arrows)t.

The following functions are specific for PocketReader Palm V 1.0 in connection with your POCKET READER.

- *Read Text*
- *Erase PR Memory*
- *Palm Configuration*
- *PR Configuration*

#### **Read Text**

Via "Read Text" you transfer the text stored in your POCKET READER to your Palm. The Palm must be connected to the activated POCKET READER via a serial connection. The text transfer is initiated via the "Read Text" button or the respective menu item. The data received from the POCKET READER are transferred directly into a new memo and displayed on the Edit-Screen. After the text transfer the memo can be edited just like with the Memo Pad.

#### **Erase PR Memory**

Via "Erase PR Memory" you can erase the data stored in the POCKET READER memory. The Palm must be connected to the activated POCKET READER via a serial connection. Erasing is initiated via the "Erase PR Memory" button or the respective menu item. Erasing the POCKET READER memory takes about 5 seconds – during this time the Palm does not react to user input.

## Palm Configuration

Via the menu item "Palm Configuration" you configure the PocketReader Palm Software V 1.0 and the serial connection to the POCKET READER.

In the "Palm Configuration" window you can change these settings:

- **Baudrate:** Speed of the text transfer, can vary from slow (300 baud) to fast (115200 baud). The optimum speed depends on the version of the operating system and on the Palm hardware.
- **COM Port:** Interface, where the POCKET READER is connected.
- **Interface Language:** The menu items and messages of the application are displayed in this language.  
Note: The program is currently available with an English user interface only!
- **Erase PR Memory after text transfer:** Query, if the POCKET READER memory should be erased after successful text transfer.

## PR Configuration

Via the menu item "PR Configuration" you configure the POCKET READER and view various information on the POCKET READER device. The Palm must be connected to the activated POCKET READER via a serial connection. On selection of this menu item the respective data are transferred from the POCKET READER to your Palm. You can then change the POCKET READER settings via the "PR Configuration" window. If changes have been made in the configuration, then the new settings are transferred to the POCKET READER on closing the window with "OK".

In the "PR Configuration" window you find the following information on the POCKET READER state:

- **Version:** Hardware version of the POCKET READER
- **Memory Capacity Occupied:** Amount of memory in the POCKET READER used to store scanned text.
- **Battery Voltage:** State of the batteries of the POCKET READER (0% = empty; 100% = full)

In the "PR Configuration" window you can change these settings:

- **Interface Language:** The menu items and messages of the POCKET READER are displayed in this language.
- **Source Language:** Language of the text to be scanned with the POCKET READER (character set, dictionary-post processing).

## Program Structure of the PocketReader Palm Software V 1.0

### List-Screen

#### Menu: Options

- **Font...:** font size for the text displayed on the screen
- **Preferences...:** sorting the memos on the List-Screen
- **About PReader:** display information on the PocketReader Palm Software

#### Menu: PReader

- **Read Text:** see above
- **Erase PR Memory:** see above
- **Palm Configuration:** see above
- **PR Configuration:** see above

#### Buttons:

- **Read Text:** see above
- **Erase Mem:** see above

### Edit-Screen

#### Menu: Records

- **Delete Memo:** erase current memo

#### Menu: Edit

- **Undo:** undo the last edit action
- **Cut:** cut selected text
- **Copy:** copy selected text
- **Paste:** paste previously cut or copied text at the cursor position
- **Select All:** select the complete contents of the window
- **Keyboard:** invoke window for keyboard input
- **Graffiti-Help:** invoke graffiti help

#### Menu: Options

- **Font...:** font size for the text displayed on the screen
- **Go to Top of Page:** ...
- **Go to Bottom of Page:** .
- **About PReader:** display information on the PocketReader Palm Software

**Contact:**

Siemens AG Österreich  
EWW NP  
Erdberger Lände 26  
A-1031 Vienna, AUSTRIA  
+43 1 7187200 196  
e-mail: [pocketreader@siemens.at](mailto:pocketreader@siemens.at)  
<http://www.pocketreader.com>